 


PictureCradle CP-FXA10

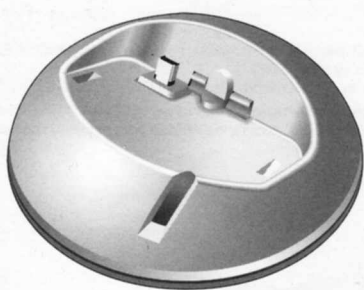

OPERATING INSTRUCTIONS

This manual will show you how to use your PictureCradle CP-FXA10 correctly.

Please follow the instructions carefully.

MODE D'EMPLOI

Cette brochure a été préparée pour vous expliquer l'utilisation correcte de votre PictureCradle CP-FXA10. Veuillez en lire attentivement les explications.

BEDIENUNGSANLEITUNG

Diese Anleitung enthält alles, was Sie über Ihre PictureCradle CP-FXA10 wissen sollten. Lesen Sie die Anleitung bitte sorgfältig durch.

MANUAL DE INSTRUCCIONES

Este manual le explica cómo usar correctamente el PictureCradle CP-FXA10. Por favor, siga atentamente las instrucciones.

BL00269-200(1) **EFGS**

ENGLISH

WARNING

To reduce the risk of fire or electric shock, do not expose the AC power adapter to rain or moisture.

The AC power adapter shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the AC power adapter.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Notes on the Power Supply

AC Power Adapter

Use only the AC-3VW AC Power Adapter with your PictureCradle CP-FXA10. Do not connect the AC Power Adapter AC-3V (sold separately) to your picture Cradle. The use of other AC power adapters with the PictureCradle may result in damage to your camera.

- This AC power adapter is designed exclusively for indoor use.
- Plug the connection cord plug securely into the DC input terminal of the cradle.
- Turn off the power switch of the cradle before disconnecting the connection cord from the cradle DC input terminal. To disconnect, grip the plug and pull it out (do not disconnect it by pulling on the cord).
- Do not use this AC power adapter with any device except the specified device.
- During use, this AC power adapter will become hot to the touch, but this is normal.
- Do not disassemble the AC power adapter. Doing so could be dangerous.
- Do not use this device in a place with high temperature and high humidity.
- Do not drop or subject this device to strong shocks.
- This device may emit a humming noise, but this is normal.
- If used near a radio, this device may cause static, so play the radio in a distant place.

Specifications (AC-3VW)

Power Supply	AC 100V to 240V, 50/60Hz
Rated Input Capacity	14VA to 19VA
Rated Output	DC 3.0V 1.7A
Temperature During Use	0°C to +40°C (+32°F to +104°F)
Storage Temperature	-10°C to +70°C (+14°F to +158°F)
Dimensions (MAX.)	39 mm x 21 mm x 77 mm (1.5 in. x 0.8 in. x 3.0 in.) (W x H x D)
Mass (Weight)	Approx. 90 g (3.2 oz.) (not including power cord)
Connection Cord Length	Approx. 1.2 m (3.9 ft.) (not including power cord)

* These specifications are subject to change without notice.

Applicable Batteries

- You can only charge the Rechargeable Battery NH-10. The NH-10 cannot be charged using the camera alone. Charge the NH-10 correctly as described in this manual.
- You cannot recharge "AA-size alkaline or nickel-metal hydride" batteries in this cradle.

Notes on the Rechargeable Battery NH-10

The Rechargeable Battery NH-10 (referred to hereafter simply as the NH-10) uses Ni-MH batteries.

Ni-MH batteries are superior to alkaline batteries in several ways, such as allowing more shots to be taken with the camera, but care must be taken with the way Ni-MH batteries are used if their original performance is to be maintained.

● Ni-MH batteries left unused in storage for long periods can become "deactivated". Also, repeatedly charging Ni-MH batteries before they are fully discharged can cause them to suffer from the "memory effect". Ni-MH batteries that are deactivated or affected by "memory" can only be used for a short time after being recharged. However, the temporary decline in battery performance caused by this phenomena can be rectified by repeatedly discharging and then recharging the batteries.

Refer to "Discharging Ni-MH rechargeable batteries" in the camera's Owner's Manual for information on the procedure for discharging the NH-10.

* "Deactivation" in Ni-MH batteries

When the Ni-MH batteries used in the NH-10 are first purchased or have been left unused in storage for a long period, a rise in the level of substances that inhibit current flow inside the battery can occur and this can result in a dormant battery. A battery in this state is referred to as deactivated.

Because current flow is inhibited in a deactivated Ni-MH battery, it may not be possible to obtain the battery's original level of performance. Note that these characteristics are specific to Ni-MH batteries and do not indicate a faulty product.

* "Memory effect" in Ni-MH batteries

If the Ni-MH batteries used in the NH-10 are repeatedly charged without first being fully discharged, their performance may drop below their original level.

WARNINGS AND CAUTIONS (PLEASE OBSERVE)

- Please read these Operating Instructions, especially the warnings and cautions, as well as the operating instructions in the camera's Owner's Manual in order to operate this cradle correctly.
- After reading, be sure to keep this manual in a safe place where you can refer to it easily.
- In order to ensure that this product is used safely and correctly, and to prevent danger to yourself and other persons or damage to property, various icons are used in this Operating Instructions and on the product. These icons and their meanings are given here. Please read the explanations for a good understanding of the meaning of each one before you read the main text of this manual.


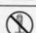

WARNING

This icon indicates a situation which could result in death or severe injury to persons who disregard these instructions and handle the product incorrectly.

CAUTION

This icon indicates a situation which could result in injury to persons or physical damage to objects, if these instructions are disregarded and the product is handled incorrectly.

Example of Icons

	Danger of Electric Shock	The contents of this icon constitute a warning (including cautions). The actual content of the caution is drawn inside the icon.
	Disassembly Prohibited	The contents of this icon constitute a prohibited action. The actual content of the prohibition is drawn inside, or next to the icon.
	Pull the electric plug out of the electric outlet	The contents of this icon signify a mandatory instruction that the owner must perform. The actual content of the instruction is drawn inside the icon.

WARNING

If a problem arises, switch the cradle off, disconnect and unplug the AC power adapter.

Continued use of the cradle when it is emitting smoke, any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

● Contact your FUJIFILM dealer.



Unplug from
power socket.

Do not allow water or foreign objects to enter the cradle.

If water or foreign objects get inside the cradle, switch the cradle off, disconnect and unplug the AC power adapter.

Continued use of the cradle can cause a fire or electric shock.

● Contact your FUJIFILM dealer.



Do not place the cradle on an unstable surface.

This can cause the cradle to fall or tip over and cause injury.



Never attempt to modify or disassemble the cradle. (Never open the casing.)

Do not use the cradle when it has been dropped or the casing is damaged. This can cause a fire or electric shock.

● Contact your FUJIFILM dealer.



Do not
disassemble.

Do not use the cradle in the bathroom or shower.

This can cause a fire or electric shock.



Do not use in
the bathroom or
shower.

Do not touch any metal parts of the cradle during a thunderstorm.

This can cause an electric shock due to induced current from the lightning discharge.



Use only the AC power adapter specified for use with this cradle.

Do not use voltages other than the power supply voltage shown.

The use of other power sources can cause a fire.



To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



CAUTION

Do not use this cradle in locations severely affected by oil fumes, steam, humidity or dust.

This can cause a fire or electric shock.



Keep out of the reach of small children.

This product could cause injury in the hands of a child.



Do not leave this cradle in places subject to extremely high temperatures.

Do not leave the cradle in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.



Do not place heavy objects on the cradle.

This can cause the heavy object to tip over or fall and cause injury.



Do not move the cradle while the AC power adapter is still connected.

Do not pull on the connection cord to disconnect the AC power adapter.

This can damage the power cord or cables and cause a fire or electric shock.



Do not cover or wrap the AC power adapter in a cloth or quilt.

This can cause heat to build up and distort the casing or cause a fire.



When you are cleaning the cradle or you do not plan to use the cradle for an extended period, unplug the AC power adapter.

Failure to do so can cause a fire or electric shock.



 
Request regular internal testing and cleaning for your cradle.

Build-up of dust in your cradle can cause a fire or electric shock.

● Contact your FUJIFILM dealer to request internal cleaning every 2 years.



Nomenclature/Nomenclature/Bezeichnung der Teile/Nomenclatura

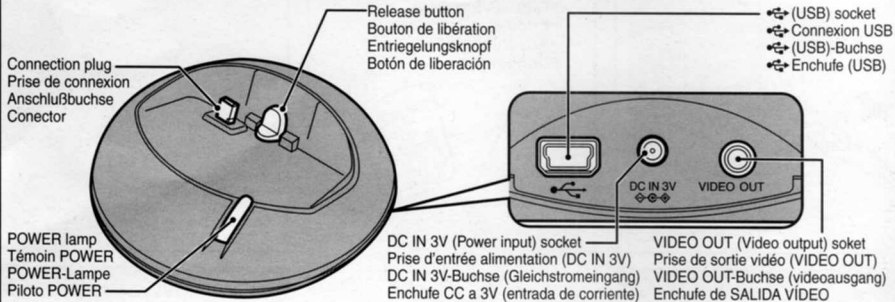

- ⚠ When using the screw in the base to mount the cradle on a tripod, take care to ensure that the cradle does not fall or tip over.
- ⚠ Lorsque vous utilisez la vis dans la base pour monter la station d'accueil sur un trépied, prenez garde à ce que la station ne tombe pas ou ne se renverse pas.

Nomenclature

- Dimensions (W × H × D): 100.5 mm × 35.1 mm × 94.8 mm/
4.0 in. × 1.4 in. × 3.7 in.
- Mass (Weight): Approx. 90 g/3.2 oz.

Accessories

- Rechargeable battery NH-10 (1)
- Included AC Power Adapter AC-3VW, power cord (1)
- Included USB cable (1)

Bezeichnung der Teile

- Abmessungen (B × H × T): 100,5 mm × 35,1 mm × 94,8 mm
- Masse (Gewicht): Ca. 90 g

Zubehör

- Wiederaufladbare Batterie NH-10 (1)
- Spezial-Netzadapter AC-3VW, Netzkabel (1)
- USB-Spezialkabel (1)

Nomenclature

- Dimensions (L × H × P): 100,5 mm × 35,1 mm × 94,8 mm
- Poids: Environ 90 g

Accessoires

- Batterie rechargeable NH-10 (1)
- Adaptateur secteur spécial AC-3VW,
cordon d'alimentation (1)
- Câble USB spécial (1)

Nomenclatura

- Dimensiones (ancho × alto × fondo):
100,5 mm × 35,1 mm × 94,8 mm
- Peso: Aprox. 90 g


Accesorios

- Pila recargable NH-10 (1)
- Transformador de corriente alterna especial AC-3VW,
Cable de alimentación (1)
- Cable especial USB (1)

⚠ Gehen Sie vorsichtig vor, wenn Sie die Dockingstation mit der Schraube am Boden auf einem Stativ anbringen, damit die Dockingstation nicht herunterfällt oder umkippt.

⚠ Cuando use el tornillo en la base para montar el soporte en el trípode, asegúrese de que el soporte no se cae o se vuelca.

 Fig. 1


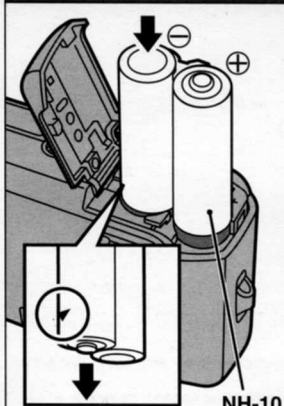


NH-10

- * Please note that the camera shown here is the FinePix A310.
- * Notez que l'appareil photo présenté ici est le FinePix A310.
- * Wir bitten zu beachten, daß das hier dargestellte Kameramodell die FinePix A310.
- * Por favor tenga en cuenta que la cámara mostrada en la presente es la FinePix A310.

Fig. 2

  - Cradle adapter
- Adaptateur pour station d'accueil
- Dockingstation-Adapter
- Adaptador del soporte

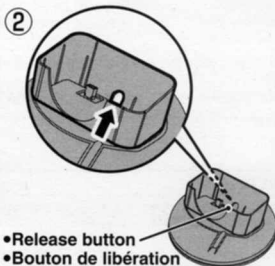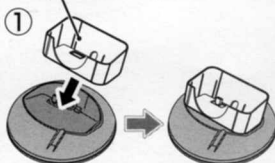

- Release button
- Bouton de libération
- Entriegelungsknopf
- Botón de liberación

Fig. 3

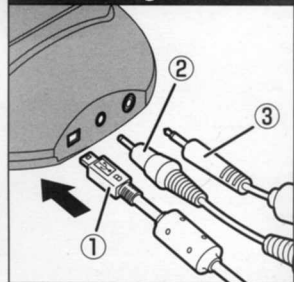 


Fig. 4

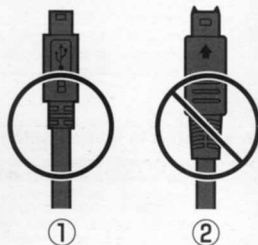 


Fig. 5

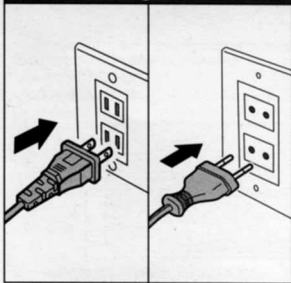 


Fig. 8

- Connection plug
- Prise de connexion
- Anschlußbuchse
- Conector



Fig. 9



Fig. 6


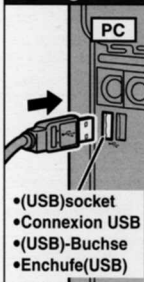 


Fig. 7

- To video input socket
- Vers la fiche d'entrée vidéo
- Zur Video-Eingangsbuchse
- Al enchufe de entrada de video

 

Fig. 10

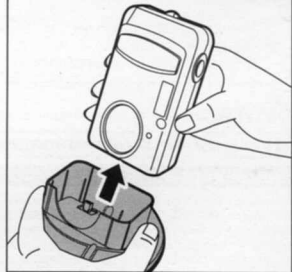

Setting Up and Using the PictureCradle CP-FXA10

Just by putting the camera in the cradle, you can ensure that your camera is always charged. The cradle will also automatically launch the "FinePixViewer" image viewing software on your PC when you are connected and switch the camera on. You can then display thumbnail lists of your photographed images on your computer for quick and easy downloading.

<Install the software first>

Before connecting the camera to your PC, install all the software provided on the CD-ROM bundled with the camera.

Load the battery into the camera

Open the camera's battery cover and insert the battery provided (NH-10) correctly in the direction indicated (Fig. 1).

Step 1

●Cradle adapter installation

Set the cradle adapter bundled with the camera in the cradle (Fig. 2-①).

① Always set the cradle adapter in the cradle before using the cradle.

●Removing the cradle adapter

Hold the cradle and remove the cradle adapter while pressing the release button (Fig. 2-②).

Step 2

Connect the AC-3VW power adapter, included video cable or included USB cable to the cradle (Fig. 3 ① Included USB cable ② AC-3VW power adapter ③ included video Cable).

Always use the AC-3VW power adapter. Connect the included video cable and included USB cable as required.

* The included video cable is bundled with the camera.

● Use only the bundled AC-3VW power adapter.

You cannot use the USB cable supplied with the camera. Always use the included USB cable provided with the cradle (Fig. 4 ① Cable provided with the cradle. ② Cable provided with the camera).

Step 3

●AC-3VW power adapter

Plug the AC-3VW power adapter into a power socket (Fig. 5).

●Connected to a PC

Included USB cable

Connect the included USB cable to the USB port on your computer.

* Push the connector firmly all the way into the USB port on the PC, taking care that the connector is oriented correctly (Fig. 6 USB socket).

●Connected to a TV

Included video cable

Insert the pin plug into the video input socket (yellow) on the TV (Fig. 7).

Step 4

Always switch the camera off before placing it in the cradle (Fig. 8).

① Plug the cable firmly into the port.

Step 5

●Charging the Rechargeable Battery NH-10

Charging starts when you put a camera containing battery (NH-10) into the cradle. The POWER lamp (red) on the cradle lights during charging and switches off when charging is complete. A fully discharged battery (NH-10) takes roughly 3 hours to fully recharge (at an ambient temperature of 5 to 35°C/41-95°F) (Fig. 9).

① You cannot charge AA-size alkaline or Ni-MH batteries.

② If you set a camera containing a fully charged battery (NH-10) in the cradle, the cradle's POWER lamp lights for roughly 15 minutes and then switches off.

③ You cannot charge the battery by connecting the AC-3VW power adapter directly to the camera.

●Connecting to a computer

Switch the camera on. This initiates the connection to the computer.

See the camera's Owner's Manual for details.

●Viewing images on a TV

Connect the special video cable bundled with the camera to the VIDEO OUT (video output) terminal on the cradle and then switch the camera on. Switch the TV to video input mode.

<Taking the camera out of the cradle>

Hold the cradle firmly and lift the camera out (Fig. 10).

<When viewing images on a TV>

Switch the camera off and remove it from the cradle.

<If the cradle is connected to a computer>

You must perform the shutdown procedure before removing the camera. For information on the correct procedure, see "Connections: Disconnecting from Your PC" (always use this procedure) in the Owner's Manual for the camera.

■ The POWER lamp on the cradle

Cradle	Camera	Camera Status
Off	Off	Camera switched off, Battery charging complete.
Lit green	Off	Camera switched on. Standby.
	Blinking	Camera switched on, Exchanging data with the computer.
Lit red	Off	Camera switched off, Battery charging in progress.
Blinking red	Off	Charging error (See "When charging is not successful" below)

■ When charging is not successful

• The rechargeable battery terminals are soiled.	• Briefly remove and then reload the rechargeable battery.
• The camera's battery cover is not closed properly.	• Carefully clean the rechargeable battery terminals with a soft dry cloth.
• You are charging the battery in a location that is too warm or too cold.	• Close the battery cover properly.
	• Charge the battery in a location with a temperature between 5°C and 35°C.

① If charging still fails, use a new rechargeable battery instead or contact your FUJIFILM dealer or authorized FUJIFILM

EC DECLARATION OF CONFORMITY

We

Name: Fuji Photo Film (Europe) G.m.b.H.
Address: Heesenstrasse 31
40549 Dusseldorf, Germany

declare that the product

Product Name: FUJIFILM PictureCradle CP-FXA10
Manufacturer's Name: Fuji Photo Film Co.,Ltd.
Manufacturer's Address: 26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106-8620, Japan

is in conformity with the following Standards

Safety: EN60065
EMC: EN55022: 1998 Class B
EN55024: 1998
EN61000-3-2: 1995 + A1: 1998 +
A2: 1998

following the provisions of the EMC Directive (89/336/EEC, 92/31/EEC and 93/68/EEC) and Low Voltage Directive (73/23/EEC).

Supplementary information:

This product is a dedicated accessory for use with the FUJIFILM Digital Camera.

DECLARATION DE CONFORMITE DE LA CEE

Nous

Nom: Fuji Photo Film (Europe) G.m.b.H.
Adresse: Heesenstrasse 31
40549 Düsseldorf, Allemagne

déclarons que ce produit

Nom du produit: FUJIFILM PictureCradle CP-FXA10
Nom du fabricant: Fuji Photo Film Co.,Ltd.
Adresse du fabricant: 26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106-8620, Japan

est conforme aux normes suivantes

Sécurité: EN60065
EMC: EN55022: 1998 Classe B
EN55024: 1998
EN61000-3-2: 1995 + A1: 1998 +
A2: 1998

selon les dispositions de la directive de la CEE (89/336/EEC, 92/31/EEC et 93/68/EEC) et de la directive Basse tension (73/23/EEC).

Information supplémentaire:

Ce produit est un accessoire dédié au FUJIFILM Digital Camera (Appareil Photo Numérique).

CE

Dusseldorf, Germany

March 1, 2000

Place
Lieu
Ort
Lugar

Date
Date
Datum
Fecha