



SMITH & WESSON



K-38 MASTERPIECE REVOLVER

MODEL No. 14

PARTS LIST • INSTRUCTIONS FOR USE • MAINTENANCE
SPECIFICATIONS • GUARANTEE



SPECIFICATIONS

Caliber.....38 S&W Special

Number of Shots.....6

Barrel.....6", 8 $\frac{3}{8}$ "

Length Overall.....With 6" barrel, 11 $\frac{1}{8}$ "

Weight Loaded.....With 6" barrel, 38 $\frac{1}{2}$ oz.
With 8 $\frac{3}{8}$ " barrel, 42 $\frac{1}{2}$ oz.

Sights.....Front: $\frac{1}{8}$ " plain Patridge.
Rear: S&W Micrometer Click
sight, adjustable for windage
and elevation.

Frame.....Square butt with grooved
tangs

Stocks.....Checked walnut Magna with
S&W monograms

Finish.....S&W blue with sandblasting
and serrations around sight-
ing area to break up light
reflection.


Trigger.....S&W grooving with an ad-
justable trigger stop.

Ammunition......38 S&W Special, .38 S&W
Special Mid Range.

SMITH & WESSON

• A BANGOR PUNTA COMPANY

Springfield, Massachusetts. U. S. A.

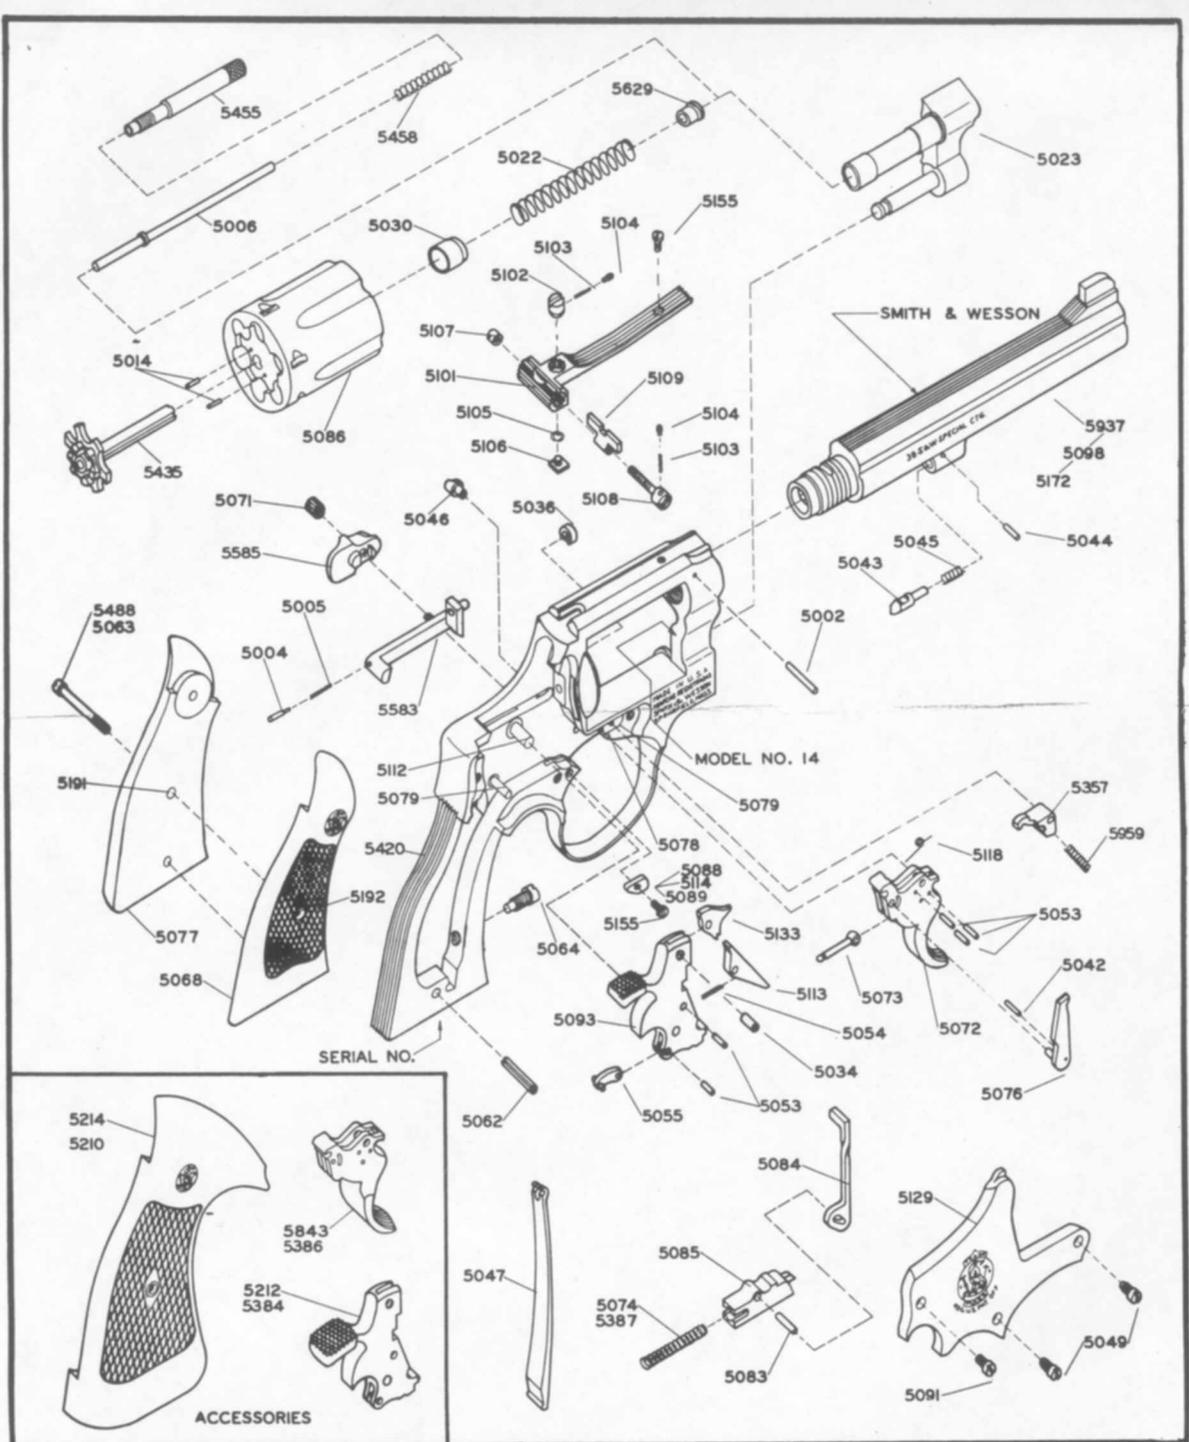

Function

The Smith & Wesson Model No. 14 target revolver is a 6-shot breech-loading hand weapon. It is produced with a solid frame and a swing-out type of cylinder, having 6 chambers around a central axis so that 6 shots may be fired before reloading is necessary. The weapon may be fired either single action or double action, and cocking the hammer by either method causes the cylinder to rotate and align the next chamber with the barrel. The rate of fire is limited only by the dexterity of the operator in reloading the cylinder and his ability to aim the weapon and pull the trigger.

Loading and firing this revolver is a comparatively simple operation, as follows:

Push the thumbpiece forward. This will release the cylinder so that it may be swung out to the left side for loading. Holding the gun so that the cylinder is in its outermost position, and with the muzzle pointing downward, insert cartridges in the charge holes making certain that they are firmly seated. Return the cylinder to its original position in the frame, pressing it firmly into place to make sure that it locks in alignment. The gun is now ready to fire.

In single action shooting the hammer is pulled or cocked to its extreme rearward position. The gun may then be fired by merely pressing the trigger. This type of shooting is used for deliberate fire where there is time to sight the gun carefully and squeeze the trigger in an unhurried fashion. It is also used in competitive shooting for not only slow fire but also for timed fire, whereby 20 seconds are allowed for the firing of each 5 shots, and rapid fire where 10 seconds are allowed for the firing of each 5 shots.

There is time even in rapid fire shooting for the deliberate handling of the gun in single action fashion just so long as the function is performed without loss of time and in a definite cadence whereby the cycle will be completed within the allocated time.

Where time or other circumstances do not allow for single action fire the revolver is used double action. To fire double action all that is necessary is to align the weapon with the object which you wish to hit and pull the trigger firmly all of the way to the rear. This will cause the hammer to rise to its full cocked position and then fall to explode the cartridge, and as previously stated the only limit to the speed with which a weapon can be manipulated in this fashion will be determined by the dexterity of the shooter. This type of shooting is required in combat work or under emergency conditions where the gun must be used with great speed.

To extract the fired cases press the thumbpiece forward and swing the cylinder out to the left side. Turn the gun muzzle upward and holding the cylinder in its extreme outward position press down sharply on the extractor rod. This will eject the fired cases down and out of the gun, which is now ready to reload.

SMITH & WESSON

K-38 MASTERPIECE REVOLVER — MODEL No. 14

PARTS LIST

PRICES EFFECTIVE OCTOBER 1, 1969 — Subject to change Without Notice — MINIMUM ORDER \$1.00

No.	Name	Price	No.	Name	Price
5002	Barrel Pin	\$.10	5089	Trigger Stop S.A.	\$ 1.20
5004	Bolt Plunger20	5091	Plate Screw, flat head20
5005	Bolt Plunger Spring30	5093	Hammer	4.70
5006	Center Pin	1.20	5098	Barrel, 6"	17.65
5014	Extractor Pin10	5100	Rear Sight Assembly	10.00
5022	Extractor Spring40	5101	Rear Sight Leaf	4.70
5023	Yoke	7.05	5102	Rear Sight Elevation Nut40
5030	Gas Ring60	5103	Rear Sight Plunger Spring10
5034	Hammer Nose Rivet20	5104	Rear Sight Plunger10
5036	Hammer Nose Bushing60	5105	Rear Sight Spring Clip10
5042	Hand Pin10	5106	Rear Sight Elevation Stud40
5043	Locking Bolt95	5107	Rear Sight Windage Nut10
5044	Locking Bolt Pin10	5108	Rear Sight Windage Screw40
5045	Locking Bolt Spring20	5109	Rear Sight Slide	1.20
5046	Frame Lug60	5112	Hammer Stud70
5047	Mainspring	1.40	5113	Sear	1.05
5049	Plate Screw, crowned20	5114	Trigger Stop	1.20
5053	Hand Spring Pin10	5118	Hand Torsion Spring20
5053	Hand Torsion Spring Pin10	5129	Side Plate	8.25
5053	Sear Pin10	5133	Hammer Nose90
5053	Stirrup Pin10	5155	Rear Sight Leaf Screw20
5053	Trigger Lever Pin10	5155	Trigger Stop Screw20
5054	Sear Spring30	5191	Escutcheon40
5055	Stirrup95	5192	Escutcheon Nut40
5062	Stock Pin10	5210	Stock, oversize Target, left	5.20
5063	Stock Screw Target40	5212	Hammer, wide spur Target	7.65
5064	Strain Screw40	5214	Stock, oversize Target, right	5.20
5068	Stock, Magna, right	2.95	5357	Cylinder Stop	1.75
5071	Thumbpiece Nut40	5384	Hammer S.A.	7.65
5072	Trigger	4.45	5386	Trigger S.A.	7.65
5073	Trigger Lever60	5387	Rebound Slide Spring60
5074	Rebound Slide Spring60	5420	* Frame, with studs, bushing & lug ..	35.30
5076	Hand	1.40	5435	Extractor	4.70
5077	Stock, Magna, left	2.95	5455	Extractor Rod	1.20
5078	Trigger Stud60	5458	Center Pin Spring20
5079	Cylinder Stop Stud60	5488	Stock Screw40
5079	Rebound Slide Stud60	5583	Bolt	3.05
5083	Rebound Slide Pin10	5585	Thumbpiece	2.35
5084	Hammer Block95	5629	Extractor Rod Collar50
5085	Rebound Slide	2.95	5843	Trigger, wide Target type	7.65
5086	Cylinder, with extractor, pins & gas ring	16.50	5937	Barrel, 8 ³ / ₈ "	17.65
5088	Trigger Stop .500	1.20	5959	Cylinder Stop Spring20
				Single Action Kit	23.55

* (factory exchange only)

REFINISHING — SMITH & WESSON WILL REFINISH HANDGUNS OF ITS OWN MANUFACTURE AT THE FOLLOWING PRICES: Refinishing — either blue or nickel — \$12.85. Change of finish — \$16.60. No change of finish is offered on the Victory or Airweight models or on the Models 28, 39 or 60. The time requirement is usually less than 30 days, and if repairs are necessary the cost of parts would be in addition to the above figures.

SERVICE

Should your Smith & Wesson revolver require adjustment, repair or refinishing, we recommend most sincerely that the weapon be returned to the factory. There is no other way to insure that the work will be done in a properly equipped and staffed shop.

Charges are very reasonable, being based on the cost of parts replaced plus a labor charge for the time expended on the job. A labor charge for one hour is usually sufficient to cover all but very extensive overhaul jobs.

Revolvers returned to the factory should be **MARKED FOR THE ATTENTION OF THE SERVICE DEPARTMENT**. A letter of instructions should be enclosed with the gun, and shipment

by individuals must be made by Prepaid Railway Express. Adherence to these suggestions will prevent loss of time in handling at the factory.

When returning guns for service, please remove custom stocks and holsters. We cannot assume responsibility for these items.

When your revolver arrives in our Service Department, it will be very carefully inspected, together with your letter of instructions. Next, a quotation covering total cost of work to be performed will be sent to you. No actual work will be commenced before receiving your approval of our quotation unless you specifically authorize us to do so.

STATEMENT OF LIABILITY

This gun is classified as a FIREARM or DANGEROUS WEAPON and is surrendered by us with the express understanding that we assume no liability for its re-sale or safe handling under local laws and regulations. Smith & Wesson assumes no responsibility for physical injury or property damage resulting from either intentional or accidental discharge, or for the function of any gun subjected to influences beyond their control, and will honor no claims which may result from careless handling, unauthorized adjustments, defective or improper ammunition, corrosion or neglect.

For your protection, examine your gun carefully at the time of purchase, then fill out and mail to us promptly the registration card bearing your gun's serial number which accompanies all new guns.

WARRANTY

The company will replace or adjust to its commercial standard any gun or part thereof returned prepaid to the factory and found by us to be defective in either material or workmanship. Such service will be made free of charge for one year from date of registered purchase. This warranty and statement of liability supersedes all previous warranties and commitments.

April 15, 1955

HELPFUL HINTS

1. Push thumb piece forward, swing out cylinder and load.
2. Close cylinder and take position on firing line.
3. STAND in a relaxed and comfortable position, feet well apart. The arm when raised should line naturally with the target. If it does not, shift the feet a bit.
4. HOLD the gun firmly but do not seize it with a "death grip." If the knuckles are white, the grip is too tight.



5. LINE the sights carefully, top of front sight even with top of rear notch, and light equal on both sides of front sight (see illustration).

6. SQUEEZE the trigger with trigger finger only, carefully keeping the sights aligned on the target. SQUEEZE is the most important function of shooting.

A pull or yank on the trigger will surely disturb alignment and result in a poorly placed shot or a complete miss. DO NOT apply the SQUEEZE with the whole hand. The squeeze should be applied between the tip and first joint of the trigger finger. Slowly at first — speed will develop with practice.

7. Watch the sights. Learn to "call your shots" before looking for them on the target. Practice "dry shooting" with empty gun. Watch sights when hammer falls. If sights jump or duck you are not squeezing the trigger. Don't hold the shot too long. If the sights don't line up on the target in 15 seconds, take the arm down and rest for a moment. Remember, good revolver shots are not born; they are made by careful and consistent practice.

SIGHT ADJUSTMENT

1. Front sight is fixed. All adjustments must be made at the rear sight.
2. Move the rear sight in the direction in which you wish the group on the target to move. (If group must be higher, elevate the rear sight. If group must go to the right, move the rear sight to the right, etc.)
3. To elevate rear sight turn top (elevating) screw to the left, or counter-clockwise. To depress rear sight turn top (elevating) screw to the right, or clockwise.
4. To move rear sight to right, turn side (windage) screw to the right, or clockwise. To move rear sight to left, turn side (windage) screw to the left, or counter-clockwise.
5. Each click of the rear sight moves the point of impact on the target approximately $\frac{3}{8}$ " elevation and $\frac{1}{4}$ " windage at 50 yards and half of that amount at 25 yards.

INSTRUCTIONS FOR USE

Care and Cleaning

Many weapons require stripping or at least partial disassembly in order to clean and oil them properly. This does not apply to the revolver, which may be cleaned and lubricated under all normal circumstances without removing a single pin or screw.

If at any time disassembly of the weapon is indicated for repairs, etc. it is recommended that the gun be returned to the factory, or you should at least employ the services of a qualified gunsmith.

To keep revolvers in proper condition, and to insure perfect functioning in time of need, it is essential that they be kept clean and coated with a rust inhibiting oil. Care is required to prevent rust, especially in damp, humid climates, or when sweaty hands come in contact with the guns.

To clean the revolver as required when the weapon is not fired, or when kept in storage, rub it externally with a lightly oiled cloth, and then swab out the bore and cylinder chambers with an oily flannel patch. Remove excess oil but leave a light film to protect the arm against rusting. Clean out all crevices with a small clean brush.

For cleaning after firing, scrub out the bore and chambers with an approved nitro solvent, and then use a brush dipped in solvent to remove all

deposits from around the breech of the barrel, extractor head, and other adjacent areas which have been subjected to the action of powder or primer residue. If there is any evidence of lead particles, or other foreign matter left in bore or chambers, it is well to scrub these parts further with a bronze or brass brush dipped in powder solvent.

After cleaning off the entire gun with nitro or powder solvent, remove all traces of the solvent, both on the exterior of the gun and in the bore and chambers, following immediately thereafter with the application of a light film of oil. Note that there is usually some residue in the steel of both barrel and cylinder that works out and becomes apparent within from 24 hours to 48 hours after the initial cleaning. This can be removed with a bristle brush with perhaps a light re-application of powder solvent, after which the oil film should be re-established on all surfaces.

The above applies if ammunition used is of American manufacture, incorporating smokeless powders and non-corrosive primers. If other than smokeless powders and non-corrosive primers are used in these revolvers then cleaning methods should be adjusted accordingly.

Do not store revolvers with a plug in the barrel, since this is a contributing factor to sweating. By the same token, maintenance or storage rooms should be kept at a constant temperature with the least possible humidity, and the guns should *not* be stored encased in anything which will attract or hold moisture, such as leather.

If revolvers are to be stored for a long period of time, the internal mechanism of the lockwork should be heavily oiled with an acid free lubricating oil, and the exterior of the guns, as well as the bore of the barrel and the charge holes of the cylinder, should be heavily coated with an anti-rust oil. It is an established fact that moisture is the greatest enemy of metallic objects, particularly in climates where temperature and humidity are high, and salt air is present. Extreme care should be exercised that all metallic surfaces be kept clean and oiled, and the wood stocks on the revolvers should be inspected for cracks caused by moisture. A periodical coat of raw linseed oil, well rubbed in with the hand, will help to prevent the splitting of stocks, but care must be exercised that the linseed oil does not get into the mechanism or on moving parts, as it has a tendency to gum when dry.

Safety Precautions

Before proceeding to use this weapon, a word of caution is in order. This gun is as safe to handle and use as we can make it, but there is no foolproof firearm. Used correctly by a competent person the revolver is one of the safest handguns. There are many safety rules but those found below are basic, and should be observed rigidly until they become second nature.

1. The gun must always be checked for live ammunition when picked up, drawn from the holster, or handed to or accepted from another individual.
2. The gun should always be holstered except when drawn for a definite purpose.
3. Never point the revolver at anything that you do not intend to shoot.
4. Do not cock the gun unless you intend to shoot it. Do not even insert the finger in the trigger guard until you are ready to fire.
5. Dry-snapping, even with dummy cartridges, should be discouraged unless same is performed on a regular target range or at a known inanimate target object.
6. When the handgun is out of the holster and held in a ready position, be absolutely certain that it is not pointing at any part of yourself or the persons of others who are in your immediate vicinity.
7. Beware of obstructions in the barrel. If, when firing, a weak or peculiar report is heard, cease firing at once and inspect the barrel for an obstruction. A stuck bullet, or any other object in the barrel, should be removed immediately, since even a plug of mud, snow, twigs, or an abnormal quantity of heavy grease in the bore, may result in a bulged or burst barrel.
8. At all times treat the revolver as the precision instrument that it actually is.

MAKE SAFE GUN HANDLING A HABIT.