

QUICK START GUIDE

BATTERY INSTALLATION

Unscrew the tailcap to install or replace the batteries.

LOCK-OUT TAILCAP

Models with a lock-out tailcap are shipped with machined marks aligned in the lock-out position to prevent accidental activation. To unlock and place in momentary-on position, rotate the tailcap clockwise approximately one turn.

MOMENTARY-ON


Depress the tailcap pushbutton to activate the light in momentary mode.


CONSTANT-ON


From the momentary-on position, rotate the tailcap clockwise approximately one-half turn to achieve constant-on activation.




Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry, ventilated area. Follow applicable laws and regulations for disposal.

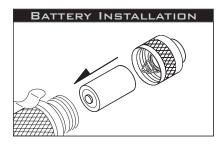

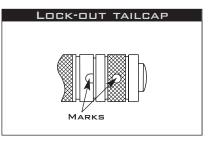

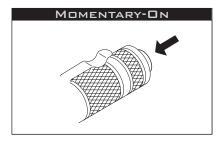

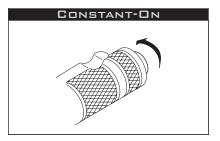

INSTRUCTIONS

BATTERY INSTALLATION

Unscrew the tailcap and insert new batteries. Replace tailcap and depress tailcap pushbutton switch to test. If light fails to function the tailcap may be in the lockout position (excluding the G2 Nitrolon[®], which does not feature a lock-out tailcap). Rotate the tailcap clockwise until momentary activation is possible.

LIGHT ACTIVATION

For momentary light, press the tailcap pushbutton switch. The light will stay on as long as the pushbutton is pressed. Rotate the tailcap clockwise for constant-on light.

LOCK-OUT TAILCAP (PAT. # 6222138)

From the momentary-on position, rotate the tailcap approximately 180° counter-clockwise. The lockout position prevents accidental activation during storage or transport.

MAINTENANCE

At least twice yearly, clean threads and O-rings with clean cloth and apply a thin coat of silicone-based grease or lubricant to both. If flashlight is used in wet environment, lubricate O-rings frequently to maintain watertight seal. After prolonged exposure to moisture, the bezel, lamp, and batteries should be removed, inspected, and dried if necessary.

LAMP REPLACEMENT

Rotate bezel (head) counter-clockwise to remove. Remove lamp/reflector assembly and replace with recommended assembly.

CAUTION



CAUTION

SureFire flashlights produce substantial heat during operation. Do not leave activated flashlight unattended. Do not set activated flashlight face (lens) down. Do not place activated flashlight against combustible material or material that could be damaged by heat. Do not hold bezel or lens of activated flashlight against any portion of human body. Keep away from children.


Ensure that the flashlight cannot be turned on when stored or being transported. If the lamp is activated while in a case or other container, the lamp could overheat and cause damage to surrounding materials. For models not equipped with a lock-out feature, remove the batteries or unscrew the bezel enough to prevent accidental activation.

Do not touch a hot lamp assembly. Allow it to cool before handling. Avoid touching reflector surface. SureFire lamp assemblies are pressurized. Always wear safety glasses when handling.

LAMP REPLACEMENT GUIDE

| FOR TWO-BATTERY FLASHLIGHTS | | |
|---|---|--|
| HIGH-OUTPUT | ULTRA HIGH-OUTPUT | |
| P60 Lamp Assembly | P61 Lamp Assembly | |
| Runtime/lumen output One hour/65 lumens | Runtime/lumen output 20 minutes/120 lumens | |

| FOR THREE-BATTERY FLASHLIGHTS | | |
|--|---|--|
| HIGH-OUTPUT | ULTRA HIGH-OUTPUT | |
| P90 Lamp Assembly | P91 Lamp Assembly | |
| Runtime/lumen output One hour/105 lumens | Runtime/lumen output 20 minutes/200 lumens | |

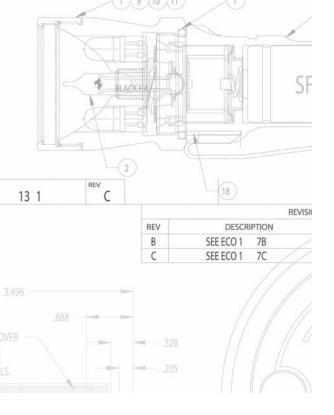

THE SUREFIRE

DIFFERENCE

SureFire strives to design and manufacture lights of ever-increasing brightness and quality while setting new standards for maximum power with minimal size. Three things characterize every product: compact size, extreme ruggedness, and a flawless high-output beam. Every SureFire illumination tool is guaranteed to produce a perfect center spot of intense light surrounded by a smooth corona of softer light.

TUNGSTEN FILAMENTS WITH XENON/HALOGEN GAS

To achieve maximum light output, SureFire lamps feature a tungsten filament in a highpressure xenon/halogen gas atmosphere.

METAL VAPOR COATED REFLECTORS

To achieve a perfect beam free of dark rings and shadows, reflectors are coated with a proprietary finish that causes light to bounce off the reflector at varied angles and cancel out any beam irregularities.

PRE-FOCUSED REFLECTORS

No need to twist the bezel to adjust the beam – it's already perfectly pre-focused. Lamps and reflectors are individually mated and hand-adjusted to within .005" for optimum beam quality at all distances.

LITHIUM BATTERIES

In addition to packing a lot of power into a small space, SureFire disposable lithium batteries have a ten-year shelf life. Put a lithium-powered light in a drawer and years later it will still work.

RUGGED CONSTRUCTION

SureFire lights are CNC machined from aerospace-grade aluminum or molded from Nitrolon, a proprietary polymer that is nonconductive and extremely resistant to corrosion and impact. Available finishes include a Military Specification Type III hard-anodizing.

LIFETIME GUARANTEE

Lamps will burn out, batteries will be used up, and switches for WeaponLights[™] will eventually need to be replaced. Everything else is covered by our lifetime no-hassle guarantee — If it breaks, we fix it!

WARRANTY

SureFire warrants its products to be free from defects in materials and workmanship. SureFire will repair or replace, at its option and without charge, any product or part which is found to be defective under normal use and service. Such repair or replacement shall be the purchaser's sole and exclusive remedy under this warranty. This warranty does not include normal maintenance and services and does not apply to any products or parts which have been subject to modification, misuse, negligence, accident, improper maintenance or repair by anyone other than SureFire.

WARRANTY LIMITATION

There is no other express warranty. SureFire hereby disclaims any and all implied warranties, including but not limited to fitness for a particular purpose. SureFire shall not be liable for incidental, consequential, or special damages arising out of, or in connection with, product use or performance.

WARRANTY CLAIMS

For repair or replacement contact Customer Service at **1-800-828-8809** (toll free) or **1-714-545-9444** and obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and return to:

SureFire, LLC

 
Repairs Department, RMA#____ 17680 Newhope Street, Suite B Fountain Valley, CA 92708

No COD's please.

SureFire will pay any reasonable shipping costs to return the unit to you.

ACCESSORIES







Holsters Choose from nylon and leather holsters.



Spares Carrier Holds lithium batteries and a replacement lamp in a watertight case. Lanyard included.



Speed Holster Carries light bezel-up or bezel-down.



Lanyard Kit Attaches between body and tailcap or bezel for secure retention.



Colored filters (FM Series) Red, Blue and Infrared.



Diffusion Filter For a wider, softer beam.



Turbo Conversion Kit Concentrates beam for long-range use.



Orange Directing Wand



Rechargeable Conversion Kit Convert your flashlight to a rechargeable.



LED Conversion Heads Convert to a long-running LED light.



Click-On Tailcap Click the light to constant-on without having to rotate the tailcap.

71-01-630 Rev. B



18300 MOUNT BALDY CIRCLE FOUNTAIN VALLEY, CA 92708 800.828.8809 SUREFIRE.COM